## Raspberry Pi Bare Metal Programming

Young W. Lim

November 12, 2014

(ロ)、(型)、(E)、(E)、 E) の(()

Copyright (c) 2011-2013 Young W. Lim. Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled "GNU Free Documentation License".

▲□▶ ▲□▶ ▲□▶ ▲□▶ □ のQ@

## Hello, World!

- For QEMU, change as follows:
  - GPIO\_BASE = 0x101E4000, (instead of 0x20200000)
  - UART0\_BASE = 0x101F1000, (instead of 0x20201000)

▲□▶ ▲□▶ ▲□▶ ▲□▶ ■ ●の00

0×10000 (instead of 0×8000)

## Reference

[1] http://wiki.osdev.org/ARM\_RaspberryPi\_Tutorial\_C[2] http://blog.bobuhiro11.net/2014/01-13-baremetal.html